

GET EMERGENCY AND PUBLIC ALERTS ON YOUR CELL PHONE. FIND YOUR PHONE. FOLLOW THESE SET-UP INSTRUCTIONS TO RECEIVE FREE ALERTS.

MOTOROLA

V400 • V555 • V505 • V361
V3 Razr • Slivr S7 • V180 • C155
C139 • L2 • V197

- Press Menu Button
- Press Message Button
- Info Services
- Select Setup Menu (Middle soft key)
- Select Setup
- Select Service
- Select "ON"
- Active Channels
- Select "New Channel"
- Enter 921 - press OK
- Back out of Menu
- Entry is complete

NOKIA

1600

- Press Menu Button
- Select Messages
- Select Message Settings
- Select Info Service
- Select ON
- Select Info Service
- "Topics"
- Add
- Enter "921" press OK
- Enter Name or press OK
- Back out of Menu
- Entry Complete

NOKIA

6161 • 6103 • 6061 • 6085

- Press Menu Button
- Select Messages
- Select Info Service
- Select ON
- "Topics"
- Add
- Enter "921"
- Press OK
- Enter Name or press OK
- Back out of Menu

SONY ERICSSON

T237 • Z300a • T226

- Press Menu Button
- Select Messaging
- Select Area Info (7)
- Select Reception
- Select ON (1)
- Select Message List (2)
- Select Add New
- Enter 921
- Press YES
- Description: Enter anything you want or nothing
- Press YES
- Entry is complete

SONY ERICSSON

W300 • W710 • W580
Z550 • Z310 • W810i
Z520

- Press Menu Button
- Select Messaging
- Select Settings
- Select Area Info
- Edit Subscriptions
- Select Add New Subscription
- Enter 921 Save
- Description: Enter anything you want or nothing
- Save
- Go back one level (key second from top on upper left)
- Edit Reception
- Select or Turn On
- Entry Complete

Additional Alert

Cellcast has added an additional alert for you to program onto your wireless phone.

WEATHER

Follow set-up instructions and enter 821 in addition to 921.

Alerta Adicional

Cellcast a agregado una alerta adicional para programar a su teléfono.

CLIMA

Siga las instrucciones para iniciar y entre 821 adición al 921.

SONY ERICSSON

T62U

- Press Menu Button
- Select Messages
- Select SMS
- Select Area Info
- Edit Subscriptions
- Select Add New Subscription
- Enter 921 Save
- Description: Enter anything you want or nothing
- Save
- Go back one level (key second from top on upper left)
- Edit Reception
- Select or Turn On
- Entry Complete

SAMSUNG

SGH-C416 • SGH-X496
SGH-X506

- Press Menu Button
- Select Messaging
- Select Broadcast Message (5)
- Select Receive (2)
- Enter ON
- Select Channel (3)
- Select ALL
- Select Add Channel (2)
- Enter 921 for the ID
- Press OK
- Enter Title: Enter anything you want or nothing
- Press OK
- Entry complete

LG

1150

- Press Menu Button
- Select Messaging (2)
- Select Info Services (5)
- Select RECEIVE (1)
- Enter YES (1)
- Select TOPICS (3)
- Selection Options
- Select ADD NEW (4)
- Enter 921 for the ID
- Description: Enter anything you want or nothing
- Save
- Back
- Select Alert (4)
- Select One (1)
- Select Auto Display (5)
- Select One (1)
- Entry Complete

LG

4050

- Press Menu Button
- Select Messages (1)
- Select Info Services (4)
- Select RECEIVE (1)
- Enter YES (1)
- Select TOPICS (3)
- Selection Options
- Select ADD NEW (4)
- Enter 921 for the ID
- Description: Enter anything you want or nothing
- Save
- Back
- Select Alert (4)
- Select One (1)
- Select Auto Display (5)
- Select One (1)
- Entry Complete

For a complete listing of all Einstein Wireless cell phones and set-up instructions, please visit us at www.einsteinwireless.net.